


# Stormtech Rear Diffuser Install




## Step 1

Locate and remove original bumper fixings

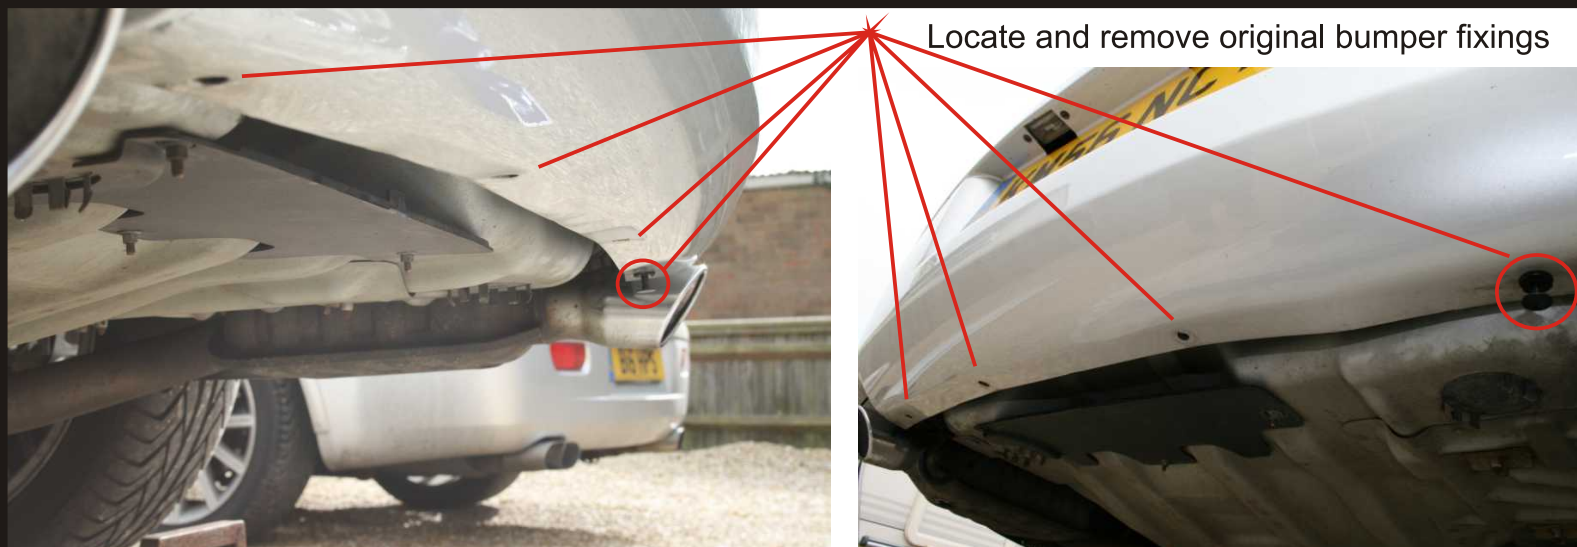

## Step 2

Offer up the diffuser to mark hole positions of the removed fixings on the diffuser

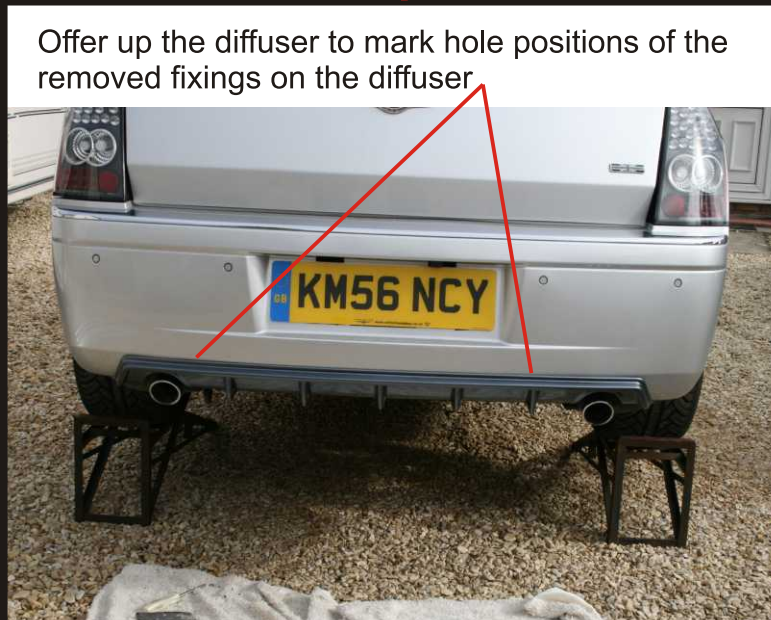


## Step 3

Drill/dremel out marked holes to diameter of fixings





### Step 4

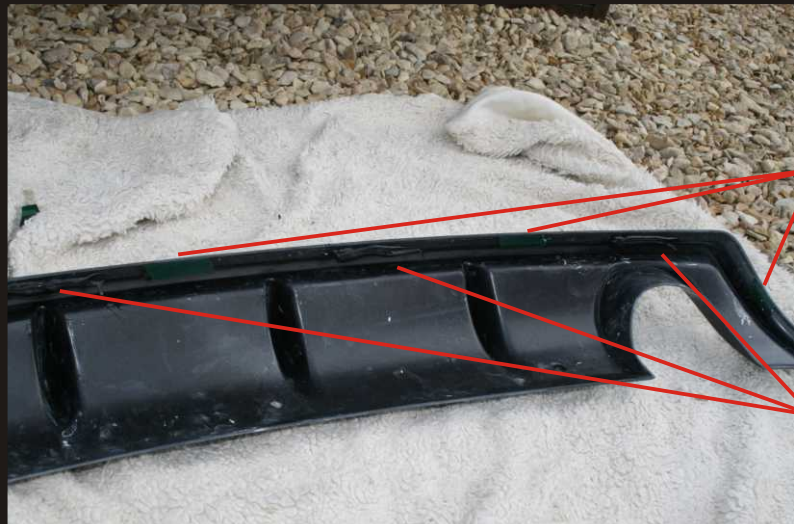

Use strips of 3m type double sided moulding tape placed at regular intervals along outside lip edge. Dependant on tape thickness 1, 2 or 3 levels of tape may be required to 'pad' out proud of the lip on the diffuser.

Bead at regular intervals with a 'Tiger Seal' type adhesive glue.

### Step 5



Locate diffuser to underside of bumper holding firm whilst locating and securing original fixings through diffuser.

### Step 6



Remove any overspill of glue, secure top and side edges with masking tape

### Step 8

(optional) secure each top corner of diffuser with self tapping screw

### Step 9

After 24 hours or as directed by glue instructions, remove masking tape, stand back and admire